



9" MONITOR HD WIRELESS CAMERA SYSTEM

VWIC904-HDWL Owners Manual

ITEM	PAGE
Warranty Information	1
Return Policy	1
Safety Information	1
What's Included	2
Camera Specs	2
Monitor Specs	3
Camera Assembly	3
Monitor Assembly	4
Installation Instructions	4-5
Monitor & Remote Operations	5-6

**LEAVE SCREEN PROTECTOR ON MONITOR TO HELP
REDUCE GLARE IF USING POLORIZED GLASSES**

QUALITY | AFFORDABLE | DURABLE



WARRANTY INFORMATION



Thank you for purchasing a Visionworks camera system. We have taken great care to provide you with a top-quality product. Visionworks comes with a one-year warranty (from the date of purchase) that covers defective materials or workmanship, as long as no wiring or parts are modified in any manner. If our product is found to be modified the warranty will be nullified. The camera has a three-year warranty if you register on our website. Please go to visionworkscameras.com and click on "Warranty Registration" or use the QR Code to increase your warranty from one year to three years.

RETURN POLICY

No merchandise should be returned to Visionworks for credit unless accompanied by a return authorization number from our company. You will receive credit for the full amount of the return if the merchandise is returned within 30 days of the invoice date. Any merchandise that is not returned within 30 days of the invoice date is subject to a restocking fee of 15%. Contact your Visionworks dealer for return information.

Merchandise that has been special ordered cannot be returned for credit. Non-stock items returned for credit will be subject to vendor's return policy.

To avoid electrical shock and maintain optimal functionality, do not open the enclosures. High voltage may be present and there are no user serviceable parts inside. All warranties will be void should any enclosures be tampered with in any way.

To prevent short circuit, make sure that the system is not plugged in or receiving power while making system connections. In the event of a system short circuit, replacement of the 3A fuse will be required. Fuses are located under the threaded tip of the cigarette lighter, and inside the threaded barrel section of the RED 12 volt supply wire. Replacement fuses are not included with this kit.

To ensure that you do not drain your battery, please disconnect the cigarette adaptor when not in use.

The camera is completely weatherproof, but the monitor is NOT and should NOT be exposed to water. Please ask about weatherproof monitors if you do not have a weatherproof cab.

SAFETY & IMPORTANT INFORMATION

WHAT'S INCLUDED

Identify your parts and find out what is included in your Visionworks camera system.



Fig 1.

HD Wireless
Camera & Antenna



Fig 2.

Camera Magnet



Fig 3.

Camera Mounting
Hardware



Fig 4.

9" HD Monitor



Fig 5.

Monitor Assembly
Hardware



Fig 6.

Monitor Visor &
Mounting Bracket



Fig 7.

Suction Cup
Monitor Mount



Fig 8.

Cigarette Lighter Adapter,
2 ACDC Adapter



Fig 9.

Remote

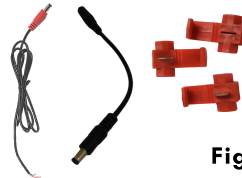


Fig 10.

Camera Hardwire, Cable,
Audio Jack, Scotch clips

Model	Resolution	Viewing Angle	Lens
Sony	1080P HD Resolution	90 Degree	3.6 mm

Weatherproof Rating	Low Temp. Rating	Connection Type
IP68	-20 C -4 F	4 Pin

CAMERA SPECS

MONITOR SPECS

Model	904
Screen Size	9 inches
Aspect Ratio	16:9
Luminance	500 cd/md2
Resolution	1024 x 600
Language	Multi-Language
Mount Type	U-Type
Sunshade	Removable
Voltage	12V-36V

Audio & Video	4 video/4 audio input (dual channel single image display)
System	PAL & NTSC automatically
OSD Menu	Display Menu, Brightness, Color, Contrast Adjustable

Built-in Recording	Yes (up to 128 GB SD Card)
Set Up	Mirror for individual image, can set reserve trigger delay in settings



INSTALATION VIDEOS

CAMERA ASSEMBLY



Fig 1.



Fig 2.

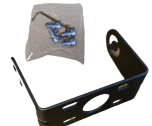




Fig 3.

Antenna

TEMPORARY MOUNTING

- 1 - ScREW in the antenna provided into the back of the camera.
- 2 - Remove flat washer and nut on magnet assembly. Position and align center hole of camera and bracket assembly on top of magnet.
- 3 - Install bolt from underside of magnet and secure with flat washer and nut. Tighten this connection.
- 4 - Secure camera and set viewing angle with the four allen wrench bolts (inside camera mounting hardware). You can always adjust your camera viewing angle later.

Tip: Although the magnet contains 65lb pull force, we recommend mounting your camera on a flat surface to minimize vibration. Sometimes a zip tie can be used in addition to fasten the camera as a preventative measure in the event the camera is knocked off.

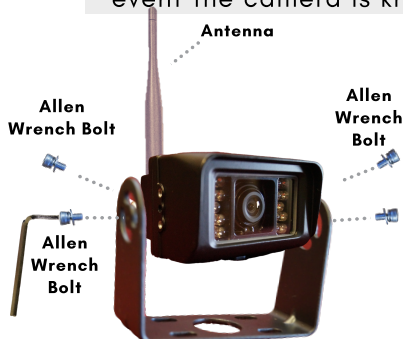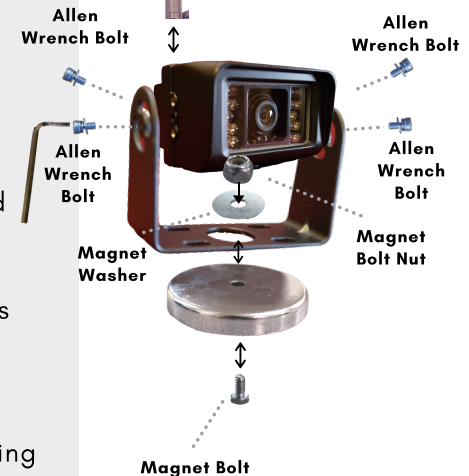

PERMANENT MOUNTING

For permanent mounting attach the camera bracket to any flat surface with the two self tapping screws or equivalent method to attach to your mounting surface (**not included in kit**).

Secure camera and set viewing angle with the four allen wrench bolts (inside camera mounting hardware). You can always adjust your camera viewing angle later.



SD Card Slot
Insert card with LABEL OUT
 some SD cards may have clearance issue
 (SD CARD NOT INCLUDED)



MONITOR ASSEMBLY



Fig 4.



Fig 5.



Fig 6.



Fig 7.

MONITOR ASSEMBLY

Before assembling and mounting your monitor please consider a location for your monitor that is out of direct sunlight (to prolong the life of your monitor and for optimal viewing) and a spot that does not obstruct your view.

- 1 - Secure antenna to the back of the monitor as shown.
- 2 - Mount the U-bracket assembly to a structure suitable to support the weight of your monitor and base (hardware not provided).
- 3 - Use the Wing nuts provided (inside your monitor assembly hardware) to secure your monitor to the U-bracket assembly.
- 4 - Tighten the wing nuts (inside your monitor assembly hardware) once your monitor is at your desired viewing angle. The wing nuts allow you to easily change the viewing angle of your monitor.
- 5 - You may use the provided suction cup mount as an alternative mounting solution.

You may also chose to Purchase a VWPVPM mount SOLD Separately

INSTALLATION INSTRUCTIONS

Please follow all directions listed below. Make sure you have mounted your camera and your monitor (using the previous directions) before beginning step #1.

STEP #1: CONNECT MONITOR HARNESS TO POWER

Your system can be powered by connecting the monitor harness power input to the mating connector of the cigarette lighter adapter. The cigarette lighter adapter can now be installed into a 12VDC power source.

We recommend when Monitor is not in use to Power it OFF, Leaving monitor on can cause camera delay and long term damage

You may also chose to hardwire your system with the cables provided.

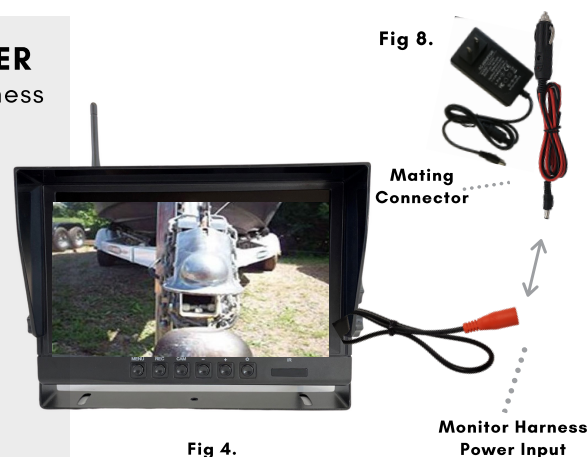


Fig 4.

Fig 8.

TRAILER RUNNING LIGHT MUST BE ON FOR CAMERA TO GET POWER

STEP #2: POWERING YOUR WIRELESS CAMERA

Permanently or temporarily mount your camera in your preferred location. Make sure your mounted camera has a clear line of sight to your receiver within 400 ft.

Connect the female barrel connector on the camera to the male barrel connector on the hardwiring cables as shown.

Use the hardwiring cables and Scotch clips to tap into an existing power source near the spot where you are mounting your camera. If you are tapping into an existing power supply for the camera, a voltmeter will be necessary to make sure you are getting a minimum voltage of 10.5v so that your camera can operate at maximum efficiency.

If you have more than one camera, repeat step #2 and #3. A common application for the CH2 video feed is for rear view imaging when in reverse. For CH2 video feed for a reverse application, it is common to connect the GREEN wire to the reverse wire on the vehicle.

STEP #3: PAIRING YOUR CAMERA WITH YOUR MONITOR

On the Monitor select the channel you want the camera to appear on by pushing the "CAM" button until you see the camera channel you would like to use (CAM1, CAM2...etc)

Once you have selected your channel, push the "M" button to access the menu. Then select the pairing icon (shown below) and select by pushing the "REC" button. You should see a 20sec countdown on screen. Within the 20sec hold down the pairing button on the camera (shown below) for 5 seconds. On the monitor, push the "M" button again and select the pairing icon and the camera should appear on the screen.



Menu button/back
button

Toggle right/up

Power

Monitor
pairing
button



MONITOR OPERATION



PICTURE

Adjust brightness, contrast, volume and hue.



MIRROR FLIP

This feature allows users to flip the image being projected by the camera.



MODE

Select various different camera viewing options.



CAMERA SET UP

Turn on/off viewing for various cameras and adjust auto scan features for pairing.



SYSTEM

Adjust the time, language, color system, auto dimming, trigger delay time, and turn on/off back-up guidance.



RECORD

The re-write feature will essentially record over previous recordings once the card is full and you can format your SD card here.